

DSL504G

1. To use the web-based management software, launch your web browser software and use the LAN IP address of the Router to access the management software.
2. The default LAN IP address of the Router is used in the Address bar of your web browser window. Type in **http://** followed by the default IP address, **10.1.1.1** in the address bar of the browser. The URL in the address bar should read: <http://10.1.1.1>
3. A new window appears prompting you for a user name and password needed to gain access the web configuration manager.
4. Use the default system user name: **admin** and password: **admin**



Enter Network Password

Please type your user name and password.

Site: 10.1.1.1

Realm: DSL-504G

User Name:

Password:

Save this password in your password list

OK Cancel

- To configure the Router's basic configuration settings without running the Setup Wizard, you can access the menus used to configure WAN, LAN, DHCP and DNS settings directly from the **Home** directory. To access the WAN Settings menu, click on the **WAN** link button on the left side of the first window that appears when you successfully access the web manager. Change the username in the username field and click apply.

Home Advanced Tools Status Help

ATM VC Setting
Please select the appropriate option to connect to your ISP.

PVC

VPI

VCI

Virtual Circuit

WAN Settings

Dynamic IP Address Choose this option to obtain an IP address automatically from your ISP.

Static IP Address Choose this option to set static IP information provided to you by your ISP.

PPPoE/PPPoA Choose this option if your ISP uses PPPoE/PPPoA (For most DSL users).

Bridge Mode Choose this option if your ISP uses Bridge Mode.

PPPoE/PPPoA

Username

Password

Connection Type

MRU

Authentication

Obtain DNS Automatically

Default Route

- When you have completed configuration of the Router, make sure you save the current configuration settings to flash memory or risk losing the settings. To save the current configuration settings, click the **Misc.** menu button to view the **Miscellaneous Configuration** menu and click the **Save and Reboot** button.

Home **Advanced** **Tools** **Status** **Help**

Miscellaneous Configuration

These are additional tools and features of the device.

Ping Test

Ping IP Address **Ping**

Ping Result:

Connections

IGMP over Ethernet Disabled Enabled

Save and Reboot

Settings need to be saved to Flash and the system needs to be rebooted for changes to take effect.

Save and Reboot

Apply **Cancel**