TD-W9970 (ADSL2+ HOME BUNDLE)

Mac OS X



IMPORTANT MESSAGE

Your modem has already been pre-configured, you do not need to follow each step of the set-up guide but should retain this document in case you need to manually configure your equipment.

To configure your PC/Laptop with your wireless password including changing your wireless password, please proceed to step 3.

Contents

- 1. Physical Connection
- 2. Configuring Modem
- 3. Configuring Wireless
- 4. Change of Password

1. PHYSICAL CONNECTION

Have your modem powered on and connected directly to your PC via Ethernet Cable before you begin, as these instructions are based on wired Ethernet connection

For further information, please see wiring diagram and instructions for your ADSL2+ Home Bundle service below.

• ADSL2+ Home Bundle Wiring Diagram



2. CONFIGURING MODEM


A. Open your browser and in the address bar type http://192.168.1.1 and press Enter.

B. Enter **admin** for both the username and password and click **Login**. If you have changed the login credentials, please enter the current username and password for your modem interface.






C. After your successful login, click **Quick Setup** in the menu. Click **Next** to start Quick Setup.

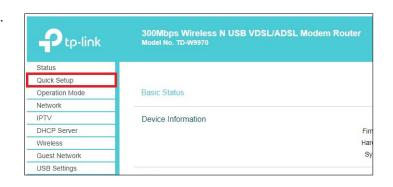

D. Select your **Region** and **Time Zone** from the drop-down list, then click **Next**.



E. Select **ADSL_TPG** as the connection type. The rest of the options will be populated automatically.

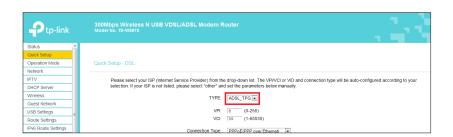




F. Enter your TPG **Username** and **Password**. Click **Next**



G. Click Next to continue.




H. You can change your Wi-Fi details or keep the default settings. The default Wi-Fi SSID (Wireless Network Name) is WiFi-XXXX (XXXX is a random 4 digit alphanumeric code printed on the sticker underneath your modem). By default, the WiFi password is printed on a sticker underneath your modem (Wireless Password/PIN). Click Next to continue.

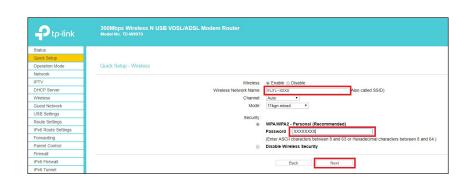

I. Confirm all parameters are correct. Click Back to modify or click **Save** to make your configuration effective.

You will see the Complete screen, click **Finish** to complete these settings.

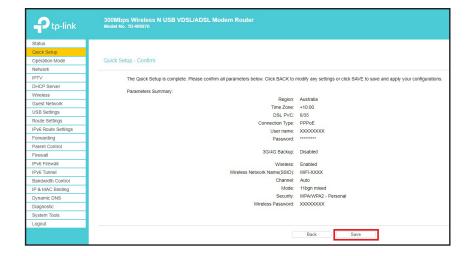



3. CONFIGURING WIRELESS

- A. Click on the Wi-Fi Icon at the top of your screen. A list of Wi-Fi networks will be displayed
- B. Click on the name of your modem. By the default, the network name should be WiFi-XXXX (XXXX is a random 4 digit alpha numeric code). This is written on a sticker on the bottom of your modem



- C. Enter your wireless password. By default, the WiFi password is printed on a sticker underneath your modem (Wireless Password/PIN).
- D. Click Join.
- E. You should now be connected to your modem



4. CHANGE OF PASSWORD

For security purposes we highly recommend that you change your password if you are using your default or if you believe your password security has been compromised. For password information, please visit www.tpg.com.au/support.

PLEASE NOTE:

Each time your modern is powered on, it will initialize this automated authentication process after which your modern will receive a public dynamic IP address (fixed or dynamic depending on your plan) and DNS settings from TPG.





